

Mira Connect™ Quick Install Guide





aveo[™]
SYSTEMS
Simplifying Collaboration

www.aveosystems.com

July 2017
Version 1.01

Document 210.1196.001

What's Included

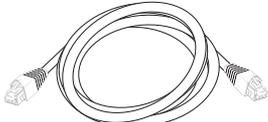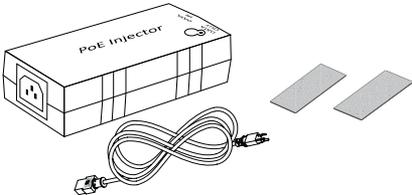Mira Connect device	
7ft (2.1m) Cat-5e cable	
Screen cleaning cloth	
Optional	
PoE injector, power cord, and dual lock strip for mounting.	

Preparing for Installation

Before starting the installation, ensure you have the following:

1. The name you'd like to use for the organization, site, and room.
2. A network connection for Mira Connect that has a route to the equipment and to Mira Portal.
3. The model numbers of the equipment to be controlled.
4. The IP addresses of the equipment and any login credentials required to control the equipment over the network.
5. Telnet is enabled for network control of the equipment, such as video conferencing equipment, if it is not enabled by default.


Installation Steps


Use Mira Portal to define a Room:

1. Create an account or log in to Mira Portal with your computer: <https://mira.aveosystems.com>.
2. Add a new **Organization** or select one. The organization is usually the name of the company where Mira Connect is installed.
3. Add a new **Site** to the organization or select one. The site is usually a building or campus location within the organization.
4. Add a new **Room** to the site or select a room.

Pair Mira Connect to the Room:

5. Connect Mira Connect to a Power-over-Ethernet (PoE) network that has a route to the equipment and to <https://mira.aveosystems.com> or connect a PoE injector for power when using a wireless network.
6. Press and hold the power switch on the Mira Connect for three seconds and then release to power on Mira Connect.

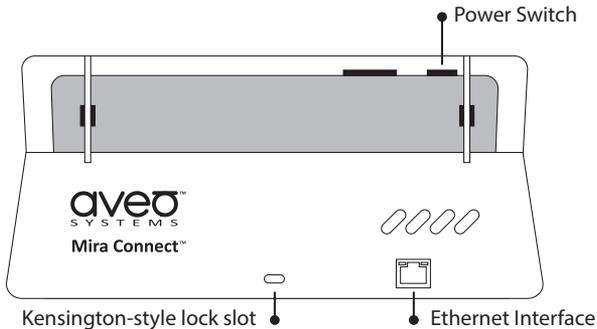


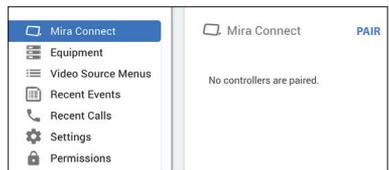7. Select the Application Language.
 8. Select the Network: Wired or Wireless. For Wireless Networks, select the network and enter the password or key, if necessary.
 9. If Mira Connect has a valid network route, it will show a pairing code to be used in Mira Portal to pair to the room.
 10. Using Mira Portal, click **PAIR** in the Mira Connect panel for the selected room, then enter the pairing code in the pop-up window.
- 

The screenshot shows the Mira Connect interface. On the left is a menu with options: Mira Connect, Equipment, Video Source Menu, Recent Events, Recent Calls, Settings, and Permissions. On the right, there is a 'Mira Connect' panel with a 'PAIR' button and the text 'No controllers are paired.'
11. On Mira Connect, confirm the desired room has been selected in the Setup Summary and then click **Finish**.


Add Equipment to the Room:

12. In Mira Portal, select the Equipment menu item. In the Equipment panel click the **ADD** button to add equipment to the room. In the pop-up window enter the IP address and optional login credentials for the equipment, and click **Update Equipment**.
13. For equipment that requires additional setup, edit the equipment, customize the equipment options or enter control points, and click **Update Equipment**. See the Administrator's Guide for more information about specifying control points.
14. Confirm all equipment shows the green "Connected" status. Edit equipment with red warning symbols to correct the IP address or control points.

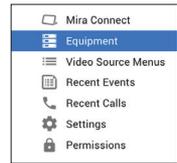

User Interface

Once Mira Connect is successfully paired with the room, the user interface will appear on Mira Connect automatically. The user options available depend on the equipment used in the room and the control points used with the equipment. Customize the visual theme for the **Site** to add a company's logo, background image, or custom colors to all rooms within the site.

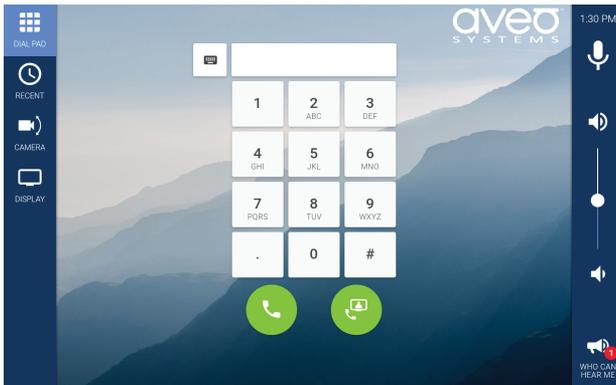

For more information, see the **Administrator's Guide** and **Mira Connect Users Guide**: <https://aveosystems.com/mira-connect-family>.

Aveo Systems, Inc., 1791 West Oak Parkway, Suite 8, Marietta, GA 30062
 Phone: +1.678.653.7090, Fax: +1.844.329.2836
www.aveosystems.com

Aveo Systems, the Aveo Systems logo, Mira Connect, and Mira Portal are trademarks of Aveo Systems, Inc.