


Control By Web X-4xx Series



Mira Connect can control the Control By Web X-4xx Series of products for use with contact closures for screen motion control.

Add the Control By Web X-4xx Series Device



Step 1

Add the Control By Web X-4xx Series device to your room in Mira Portal (<https://mira.aveosystems.com>) and enter an IP address for the device and click 'Add Equipment'.

There are no other settings to configure on device.

The number of contact closures will be detected automatically by Mira Connect.

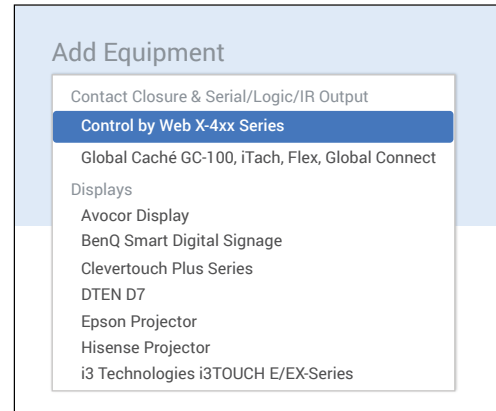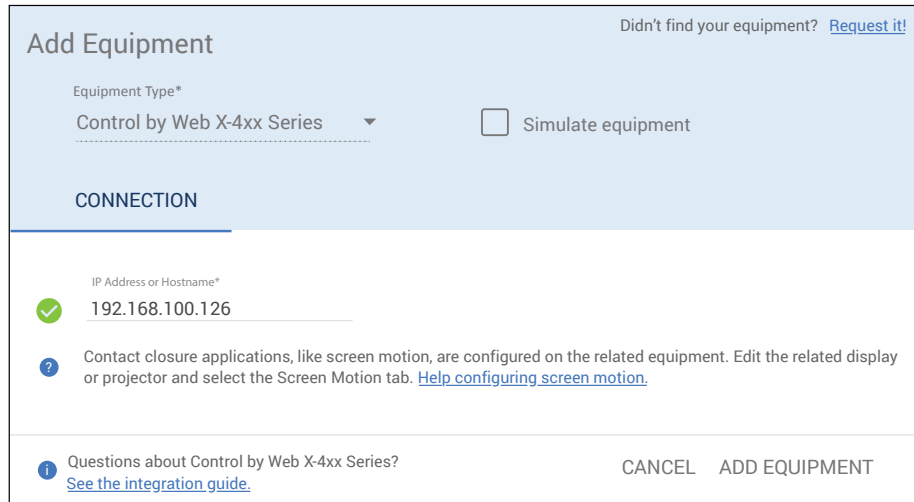

See our [Screen Motion Control](#) article for how to configure screen motion on the projector or display after you've added the Control By Web X-4xx Series device to your system.






The screenshot shows the "Add Equipment" form. At the top right, it says "Didn't find your equipment? [Request it!](#)". The "Equipment Type*" dropdown is set to "Control by Web X-4xx Series". There is a checkbox for "Simulate equipment" which is unchecked. Below this is a section titled "CONNECTION" with a sub-section "IP Address or Hostname*" containing the value "192.168.100.126" with a green checkmark icon. A warning icon and text state: "Contact closure applications, like screen motion, are configured on the related equipment. Edit the related display or projector and select the Screen Motion tab. [Help configuring screen motion.](#)". At the bottom, there is an information icon and text: "Questions about Control by Web X-4xx Series? [See the integration guide.](#)". Buttons for "CANCEL" and "ADD EQUIPMENT" are at the bottom right.

Validate the Network Connection

Step 2

Once the equipment has been added to the room, Mira Portal will show the equipment status as a green circle, , if the IP address is valid and Mira Connect can communicate to the device, otherwise the warning symbol, , will appear indicating the IP address is not correct or Mira Connect does not have a network route to the device.

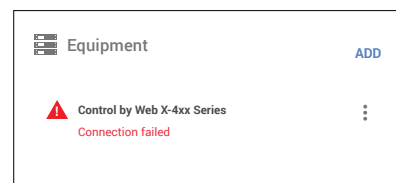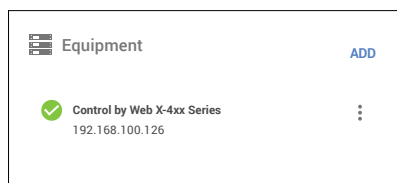

Connection Interface

Mira Connect communicates with the Control By Web X-4xx Series over http.

To ensure the Control By Web X-4xx Series device's IP address doesn't change over time, set a static IP address on the device.

See the [Mira Connect Administrators Guide](#) for more information about using Mira Portal to set up Mira Connect.

For more information please contact our Sales Department at sales@aveosystems.com.

About Aveo Systems

Aveo Systems is a leading provider of intuitive and easy-to-use solutions for audio, video, and collaboration, improving how systems are used and managed by customers world-wide.

Specifications subject to change without notice. Aveo Systems and the Aveo logo are registered trademarks. All other trademarks are the property of their respective owners.

