

LiteTouch 4K UHD Displays

Displays



Lite the Nite Technologies' LiteTouch displays can be controlled with Mira Connect™, Aveo Systems' smart control appliance. Mira Connect communicates and controls LiteTouch display over a network connection or an RS-232 connection.


Follow these steps to integrate an LiteTouch display with Mira Connect:

Step 1

Add the LiteTouch display to the room

Add the Lite the Nite LiteTouch display to the room in Mira Portal (<https://mira.aveosystems.com>), and enter the IP address as shown in the following figure.

If you don't have a LiteTouch display yet, you can enable 'Simulate equipment' and continue setting up the system and building the user interface.

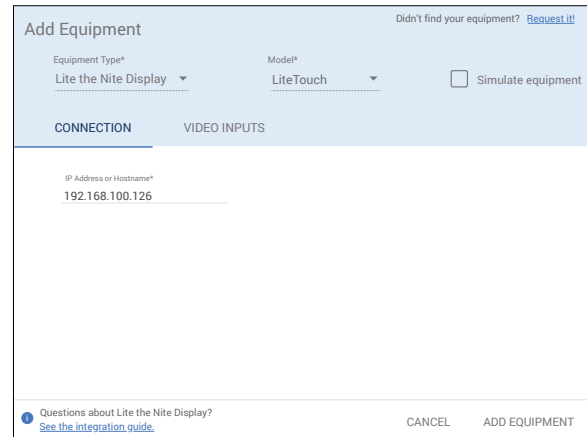

Step 2

Enable Video Inputs on the LiteTouch display

Navigate to the Video Inputs tab and specify which video inputs are used on the display.


Enable an input, select an icon, and enter text labels for the desired inputs. This will create a display menu as shown in the following figure.

If using sources from tuners or video switchers, click the 'Use Sources Connected to Other Equipment...' link and select the device where the video input is coming from.

The display menu will be built and previewed on the VIDEO INPUTS tab within Mira Portal. An optional display name may be entered which is useful if you have multiple displays in a room.

You can re-arrange the order of the items in the display menu by clicking and dragging an input in the Menu Preview.

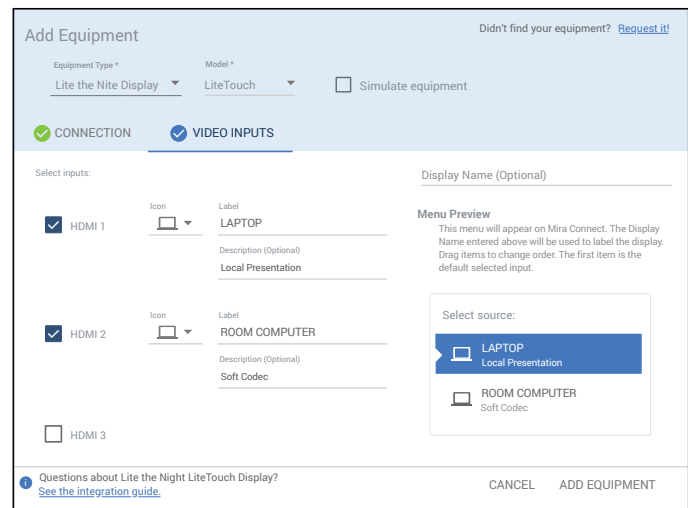

Click **Add Equipment** when done to connect to the display.





Step 3

Connect to the display

Once the equipment is added, Mira Connect will connect to the LiteTouch display system and show the status of the connection.

Mira Portal will show the equipment status as a green circle, , if the IP address is valid and Mira Connect can communicate to the device, otherwise the warning symbol, , will appear indicating the IP address is not correct or Mira Connect does not

have a network route to the device.

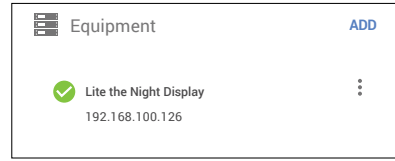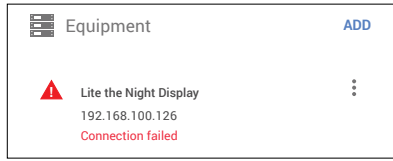


See the [Mira Connect Administrators Guide](#) for more information about using Mira Portal to set up Mira Connect.

Important information about the integration is summarized below.

Control Interface

1. Network connection using telnet using port 23.
2. Network connection using TCP, port 4999 when using the Global Cache IP2SL for RS-232 control.

If using the Global Cache IP2SL interface for serial control, see our Global Cache [integration guide](#). Ensure the baud rate on the Global Cache IP2SL matches the baud rate configured on the display. Default RS-232 settings for LiteTouch displays are 38,400 baud, no parity, 8 data bits, one stop bit, and no flow control. Typically the cable is a cross-over DB9F to DB9F.

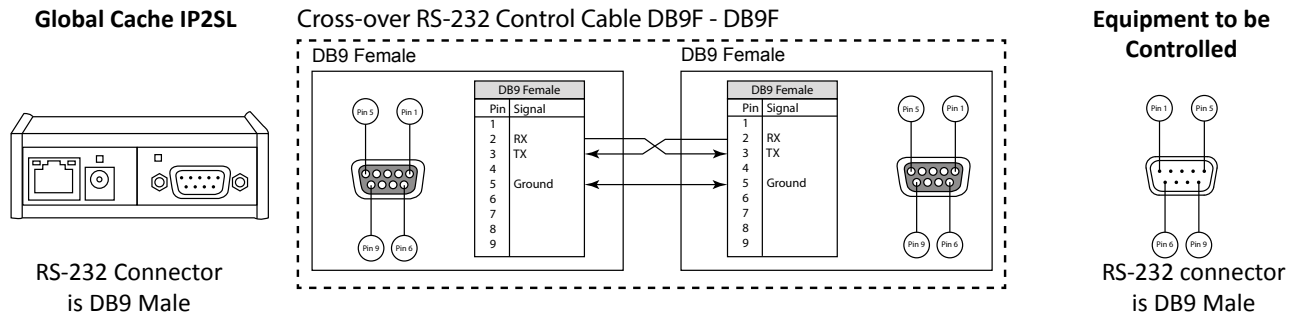

Regardless of which control interface option is specified, set a static IP address, or use a 'reserved' lease on a DHCP server to ensure the IP address does not change over time.

Supported Control

Supports power on off, video source selection, and volume control.

Supported Models

Mira Connect supports the all LiteTouch displays that use their control protocol.

Software Versions

Tested against the LiteTouch API.

Troubleshooting

If the display shows a Connection failed message or isn't responding to commands, check:

- The RS-232 baud rate of the Global Cache IP2SL interface. Change the default value from 19,200 to 38,400.
- The IP address of the display matches the IP address entered in Mira Portal and that Mira Connect is on the same network or has a network route to the display.

For more information please contact our Sales Department at sales@aveosystems.com.

About Aveo Systems

Aveo Systems is a leading provider of intuitive and easy-to-use solutions for audio, video, and collaboration, improving how systems are used and managed by customers worldwide.

Specifications subject to change without notice. Aveo Systems and the Aveo logo are registered trademarks. All other trademarks are the property of their respective owners.



DS-11089-001
Version 20210927